



Doc. No. NDP 209U-16

OPERATION MANUAL

YAMADA AIR-OPERATED DOUBLE DIAPHRAGM PUMP

DP-F series
DP-F/P series
DP-Fi series
DP-Fs series

Simplified Declaration of Conformity

YAMADA CORPORATION declares under our sole responsibility that the products described below are in conformity with the following standards and/or directives.

EU Declaration of Conformity:



Product : AIR OPERATED DIAPHRAGM PUMP series and PULSATION DAMPENER series
Model : NDP, DP, G, and AD series; excluding NPT thread type

Directive 2006/42/EC

Directive 2014/30/EU (NDP-E and DP-E series)

EN ISO 12100:2010

EN 809:1998 + A1:2009

Manufacturer

Name of company : YAMADA CORPORATION

Address : 1-1-3, Minami-Magome, Ota ku, Tokyo, 143-8504 Japan

Importer / Authorized Representative in EU

Name of company : YAMADA EUROPE B.V.

Address : Aquamarijnstraat 50, 7554NS Hengelo(Ov), the Netherlands

Original declaration is available at the following Internet address:

<https://www.yamada-europe.com/downloads>

- Preface

Thank you for purchasing a Yamada Diaphragm Pump. This product is a positive-displacement pump that transfers fluids by movement of diaphragms driven by compressed air through a unique switching mechanism. The casing that comes in contact with the fluid is made of fluorine resin Yamada.

- For Safe Operation

This document describes the items that are important for the user to operate this product safely, correctly, and efficiently. Before operating this product, read this manual thoroughly, in particular, "Warnings and Cautions" at the beginning of this manual, with a good understanding of its contents. Keep this manual carefully in an easy-to-access place so that the user may refer to it whenever necessary.

- Warnings and Cautions

To use this product safely, be sure to observe the contents of the following description. In this manual, warnings and cautions are indicated by using symbols. These symbols are intended to prevent death or serious injury that may be caused to the operator or those who are around the product and damage that may be caused to the articles that are around the product, as well as to use the product safely and correctly. Each symbol is indicated and has a meaning as shown below. Read the description with a good understanding of its contents.



WARNING :

This indicates the existence of potential hazard which, if not avoided, will result in death or serious injury.



CAUTION :

This indicates the existence of potential hazard which, if not avoided, may result in bodily injury or in physical damage.

To indicate the contents of danger and damage, the following symbols are used together with the above indications.



This symbol indicates an act that is prohibited (prohibition). The concrete contents of prohibition are indicated by the side of the indication.



This symbol indicates the contents that must be observed. The concrete contents of observance are indicated by the side of the indication.

- Precautions on Use

The following warnings and cautions are very important. Be sure to observe them.



WARNING



- The DP-F series pumps are intended for pumping hazardous fluids such as those that contain strong acids or organic solvents. If you find any irregularity in this product, do NOT try to disassemble or service the product yourself. Contact your dealer or our regional office for service. If you disassemble or service this product yourself and if further irregularity occurs, it may cause a great risk, depending upon the kind of fluid to be pumped.



- Always use genuine Yamada parts when replacing component parts of this product. Do NOT attempt to modify the components parts or replace them with other than genuine Yamada parts.



- When using compressed gas (hereinafter called "compressed air") to drive this pump, be sure it is one of the following:

- * Compressed air supplied from an air compressor
- * Nitrogen (N₂) gas

Use of compressed air other than the above may cause air pollution, damage to the pump, or even an explosion.

WARNING

- The maximum permissible pressure for the compressed air, and the fluid pumped by one of these pumps, depending upon the casing material of the model you are using, is as follows:
 - * Plastic casing (polypropylene, fluorine resin): 0.5 MPa
 - 0.7 MPa for the DP-25F/38F (0.5 MPa for the DP-20F/P, DP-25F/P, DP-38F/P)
 If the pressure of the compressed air and fluid exceeds the above applicable maximum permissible pressure specified above, there may be leakage of fluid, damage to the casing, or even a severe, possibly even fatal, accident.
- When moving this product, make sure that the internal pressure is released. If the pump is moved while under pressure, any shock imparted by droppage, etc. may damage the pump or even cause an explosion.
- Hazardous fluids (with strong acid or alkali, flammable or toxic) or gas bubbles generated by such fluids may cause serious injury or even death if accidentally inhaled or consumed or if they come into contact with the eyes or adhere to skin. Therefore, the following precautions are strongly advised.
 - * Be fully familiar with the properties of the fluid to be pumped and work in strict accordance with the operating instructions provided by the suppliers of such fluids (such as wearing goggles, gloves, mask or work clothes).
 - * When storing a hazardous fluid, strictly comply with the regulatory procedures (such as using proper containers, storage conditions, etc.).
 - * Always install the piping and exhaust port of this pump away from human and animal traffic.
- When a diaphragm is damaged, fluid will gush out together with air through the exhaust port. Also when pump has positive suction head, liquid will be forced out from exhaust port due to positive inlet pressure. Make sure to provide protective measures in consideration of possible leakage of fluid (see NOTE: Arranging outside exhaust on P.8). For example using a hose and pit etc., also be sure you are using a model with appropriate corrosion resistance for the fluid to be pumped.
- Improper grounding, poor ventilation, or unshielded fire or spark can create a danger of fire or explosion. Therefore, the following precautions are strongly advised.
 - * All peripheral equipment and piping connected to this product should be properly grounded.
 - * Whenever you notice any spark while operating this product, immediately stop its operation, and do NOT start using it again unless you are sure of the cause and corrective actions have been taken.
 - * Depending upon the type of fluid being pumped, bubbles of flammable gas may be generated. Make sure that ventilation is satisfactory.
 - * This product itself, its piping and exhaust ports should be kept away from unshielded fire, spark and other causes of ignition. If a diaphragm is damaged, fluid will gush out together with air from the exhaust port.
 - * Do NOT leave gasoline or solvent etc. that contains waste at the work site.
 - * Machinery and other equipment near the place of installation of this product should be insulated to prevent conduction with each other.
 - * Do NOT operate heating devices that create flames or have heating filaments anywhere near the pump or its piping.
 - * If there are flammable gases in the air while the pump is operating, do NOT switch electric appliance on and off.
 - * Do NOT operate a gasoline engine at the work site.
 - * Restrict smoking at the work site.
- After you shut down the pump and disconnect the piping, some fluid may remain inside the pump. Also, if the pump is left unused for a prolonged period, some fluid may remain inside the pump and connected piping. Therefore, be sure to purge the system of fluid and clean the pump before prolonged disuse.
- If the pump is left unused for a long period with chemicals inside, gas may permeate through diaphragms or other parts and cause metal parts to corrode. When shutting down the pump for more than one day, let it run for about 10 minutes a day to displace the trapped air.
- Torque of all tightening parts must be inspected before operation. Designated torque are mentioned in maintenance manual.

-Others

! WARNING



- When pumping a hazardous fluid (hot, flammable, strong acid, etc.) with this product, provide protective measures (install a pit, a protection box, sensors, etc.) in consideration of possible leakage of fluid, and post warning signs at necessary places. Make the warning symbols in "12. Warning Symbols", and attach them to the casing and piping, etc. Leakage of fluid may cause fire, air pollution or a serious accident. When pumping a hot fluid, the casing and piping will become hot, which may burn the skin when touched.

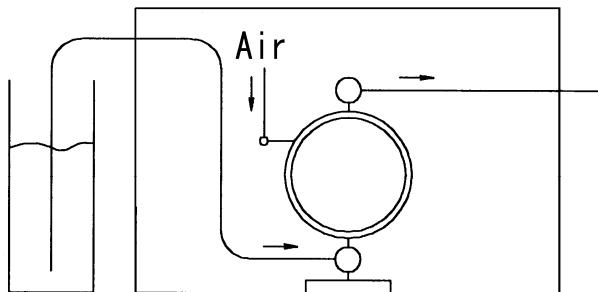


Fig.0.1



- Before using this product, be sure you are familiar with the precautions regarding the fluid to be pumped, and verify the corrosion resistance of the parts that will come into contact with the fluid. NEVER use the product with any fluid against which it does not have sufficient corrosion resistance or with a fluid that poses a risk of explosion. If you are unsure of the corrosion resistance, contact your dealer or our regional office. If you use this product with any fluid against which the parts that will come in contact with the fluid do not have sufficient corrosion resistance, it may result in damaging the product or leakage of fluid.



- When working in the vicinity of pumping of fluid with this product, be sure to wear protective gear (goggles, mask, etc.).



- When using this product, observe the relevant regulatory rules concerning fire prevention, labor safety standards, etc..



- If you have any questions on the operation of this product (method of connection or installation), contact your dealer or our regional office.

! CAUTION



- While operating this product, do NOT cover the intake port by hand.



- When operating this product, it may generate loud operating noise, depending upon the condition of use (fluid pumped, supply air pressure and discharge pressure). If regulatory rules apply, provide appropriate acoustic measures where necessary. (For the noise value of this product, see "10.1 Main specifications")



- To drive this product, use supply air with minimum moisture content.



- If a diaphragm of this product is damaged, supply air may mix with the fluid or the fluid may flow into the main body (air-switching portion). If air supply is inadequate or contaminated, do NOT operate the pump.



- If the pump remains unused for a long period of time, or you have misgivings about running the pump, please consult with the dealer where you purchased it or our Sales office.


Table of Contents

- Preface	
- For Safe Operation	
- Warnings and Cautions	
- Precautions on Use	
1. Names and Materials of Parts	
1.1 DP-F series	1
1.2 DP-F/P series.....	3
1.3 DP-Fi series	4
1.4 DP-Fs series	5
2. Installation of Accessories	6
3. Installation	
3.1 Method of transport	7
3.2 Installing the pump.....	7
4. Connection	
4.1 Connecting fluid piping.....	9
4.2 Connecting air piping.....	10
5. Operation	
5.1 Operating method	11
5.2 Flow adjustment	11
5.3 Shutdown.....	12
5.4 Releasing the pressure.....	12
6. Method of Cleaning	13
7. Daily Check	13
8. Troubleshooting	14
9. Returning the Product for Servicing	
9.1 Before returning the product.....	15
10. Main Body Specifications	
10.1 Main specifications.....	16
10.2 Appearance and dimensions.....	20
10.3 Performance curve	27
11. Limited Warranty	31
12. Warning Symbols	32


1. Names and Materials of Parts

1.1 DP-F series


- | | |
|-----------------|-------------------|
| A: Air valve | F: Pump base |
| B: Reset button | G: Discharge port |
| C: Out manifold | H: Intake port |
| D: Out chamber | I: Lift point |
| E: In manifold | |

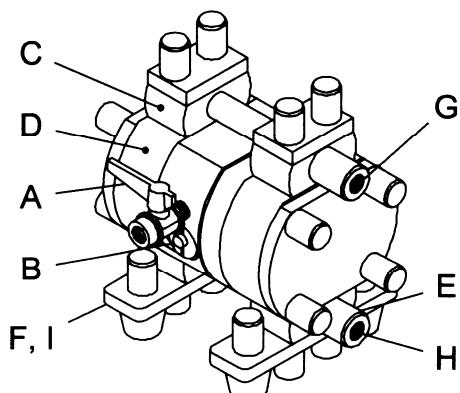

DP-5F

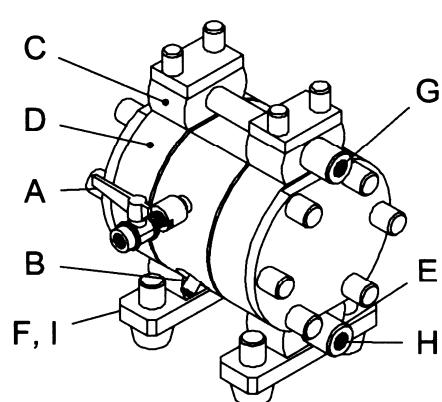

DP-10F (PT: FEMALE)
DP-20F (PT: FEMALE)

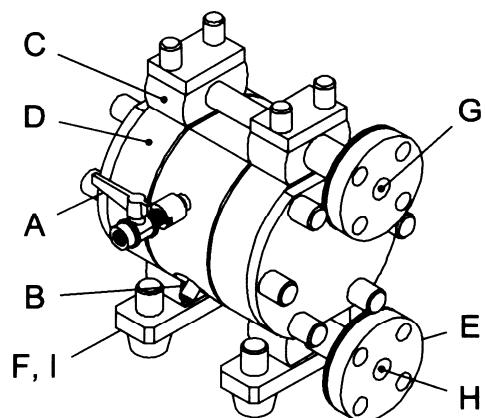


DP-10F (JIS 10K 10A)
DP-20F (JIS 10K 20A)

Type	DP-5F	DP-10F	DP-20F
Switching part	PPS		PP
Fluid contact portion	PTFE		PTFE
Diaphragm		PTFE	
Ball / O ring		PTFE	
Valve sheet		PTFE	
Center disk			PFA (SUS316)

■ Accessories list

- Simple Operation Manual 1
- Air valve..... 1
- Silencer 1 (exclude DP-5F)
- Union (Air port) 1 (exclude DP-5F)
- Union (Exhaust port) 1 (only DP-10F, 20F)
- Reinforcement plate 8 (only Flange type)

A: Air valve	F: Pump base
B: Reset button	G: Discharge port
C: Out manifold	H: Intake port
D: Out chamber	I: Lift point
E: In manifold	

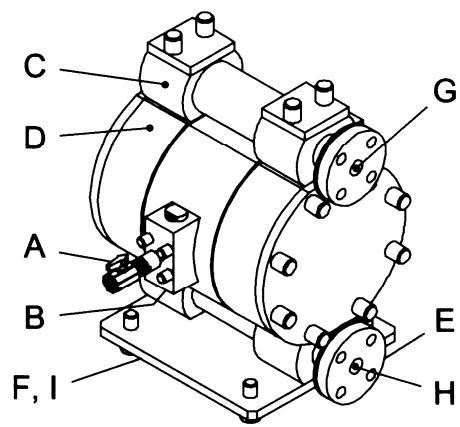

DP-25F
DP-38F


Type	DP-25F	DP-38F
Switching part		HDPE, PP
Fluid contact portion		PTFE
Diaphragm		PTFE
Ball / O ring		PTFE
Valve sheet		PTFE
Center disk		PFA (SUS316)

■ Accessories list

- Simple Operation Manual..... 1
- Air valve 1
- Silencer 1
- Union 1
- Reinforcement plate 8

1.2 DP-F/P series

A: Air valve	F: Pump base
B: Reset button	G: Discharge port
C: Out manifold	H: Intake port
D: Out chamber	I: Lift point
E: In manifold	

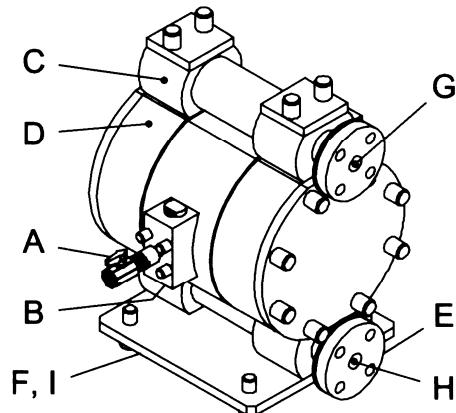

DP-20F/P
DP-25F/P
DP-38F/P



Type	DP-20F/P	DP-25F/P	DP-38F/P
Switching part	PP		HDPE, PP
Fluid contact portion		PTFE	
Diaphragm		PTFE	
Ball / O ring		PTFE	
Valve sheet		PTFE	

■ Accessories list

- Simple Operation Manual..... 1
- Air valve 1
- Silencer 1
- Union 1
- Reinforcement plate 8

1.3 DP-Fi series

- | | |
|-------------------|----------------------------|
| A: Air valve | F: Piping block assembly A |
| B: Reset button | G: Valve body assembly |
| C: Air chamber | H: Piping block assembly B |
| D: Discharge port | I: Pump base |
| E: Intake port | J: Lift point |

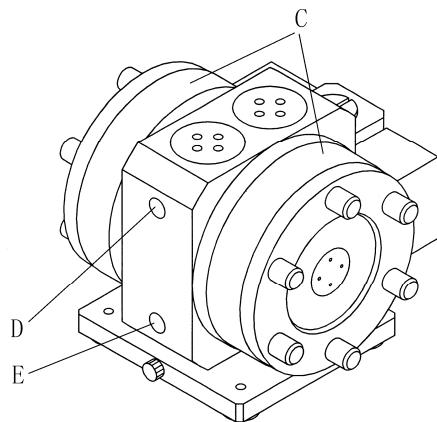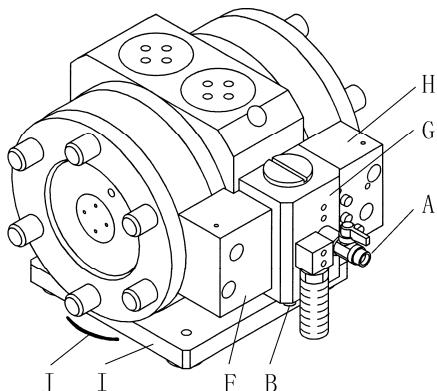

DP-10Fi/P/R

DP-20Fi/P/R


Type	DP-10Fi/P/R	DP-20Fi/P/R
Switching part	PP	HDPE, PP
Fluid contact portion	PTFE / PFA	
Diaphragm	PTFE	
Ball / O ring	PTFE	
Valve sheet	PTFE	
Center rod	PFA	

■ Accessories list


- Simple Operation Manual..... 1
- Air valve 1
- Silencer 1
- Union (Air port) 1
- Union (Exhaust port) 1
- Cushion 4
- Accessory Tool 1

1.4 DP-Fs series

A: Air valve	F: Pump base
B: Reset button	G: Discharge port
C: Out manifold	H: Intake port
D: Out chamber	I: Lift point
E: In manifold	

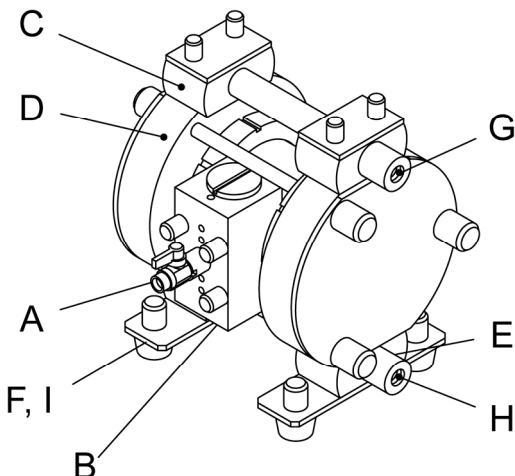

DP-10Fs/P/H (THREAD TYPE)
DP-20Fs/P/H (THREAD TYPE)

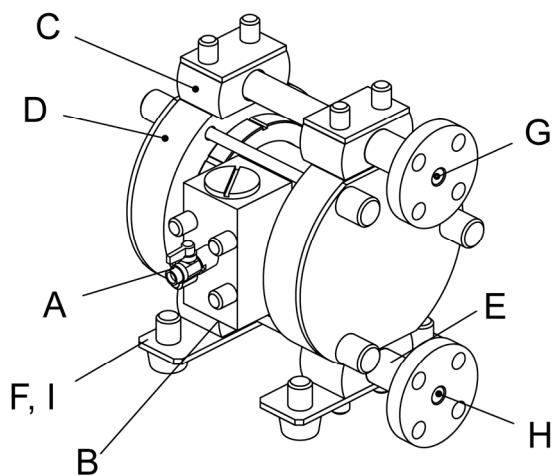

DP-10Fs/P/H(FLANGE TYPE)
DP-20Fs/P/H(FLANGE TYPE)

Type	DP-10Fs/P/H	DP-20Fs/P/H
Switching part	PP	
Fluid contact portion	PTFE	
Diaphragm	PTFE	
Ball / O ring	PTFE / FFKM	
Valve sheet	PTFE	

■ Accessories list

- Simple Operation Manual..... 1
- Air valve 1
- Silencer 1
- Union (Air port) 1
- Union (Exhaust port) 1
- Reinforcement plate 8

2. Installation of accessories

- 1) First, open the product package and make sure that all the accessories are in order (see “1. Names of parts and materials” ■Accessories list).
- 2) Attach the air valve and the silencer (nipple) (see the appearance drawings on “1. Names of parts and materials”).
(With some models, these are already installed.)



CAUTION



- All of the connection parts are capped or taped for shipment. Remove the caps and tapes.



- When installing accessories, make sure that no foreign matter falls into the product, as it could cause malfunction of the switching portion.



- Cover each screw with sealing tape to prevent leakage.



- See “10.1 Main specifications”. Remember that the pump is heavy, so extreme care must be taken when lifting it.

3. Installation

3.1 Method of transport

When lifting the pump using a chain hoist or crane before transporting it, be sure to lift it by the specified lift point (see “1. Names of parts and materials”).

WARNING



- Be careful that nobody will pass under the pump when you lift it. It would be very dangerous if the pump should fall.

CAUTION



- NEVER try to move the pump by pulling the hose connected to the pump. The hose or the pump may be damaged.
- See “10.1 Main specifications”. Remember that the pump is heavy, so extreme care must be taken when lifting it.
- When moving the pump with a forklift or truck, make sure that the pump will not fall. If it does, it may be damaged and/or cause bodily injury.

3.2 Installing the pump

- 1) Decide where the pump should be installed and secure a suitable space (see Fig. 3.1 A to D).

<NOTE>

- Try to keep the suction lift as short as possible. Protect diaphragm from abnormal breakage, inlet pressure must be kept below the following values:
 - * PTFE diaphragm : 0.02 MPa (height 2 m) During operation
: 0.05 MPa (height 5 m) Not in operation
(Condition with fresh water under ambient temperature)
- Remember to provide sufficient space around the pump for maintenance.
- The direction of the fluid intake port and the discharge port can be switched opposite from each other. (For switching, see the maintenance manual; exclude DP-Fi series.)
- In the event diaphragm failure the exhaust from pump may contain some sludge.
When operating the pump where it would have an impact on the environment, the exhaust should be directed to a place where there will be no environmental impact.

- 2) Remove the pump from the package and install it in the designated location.
- 3) When fixing the pump in place, use the cushions on the pump base, and secure the pump by tightening the tied-down bolts a little at a time.




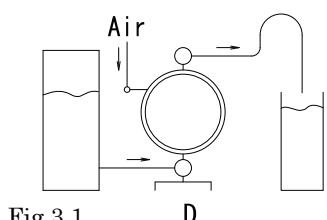


Fig.3.1

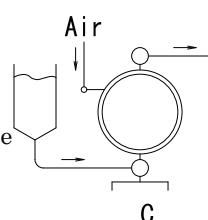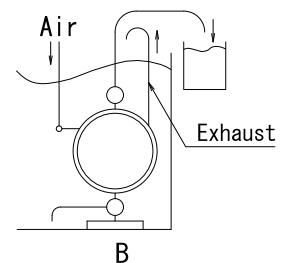

WARNING

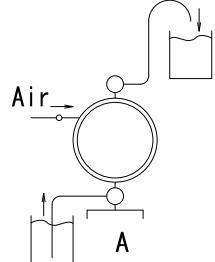

- If using the pump with a flammable fluid or in a flammable environment, read the Precautions on Use on P.2/3.



CAUTION



- Even if you do not use the cushions to secure the pump in place, mount it in such a way that vibration generated by pump operation will be absorbed.
- If the pump will be submerged during operation, follow the steps below:
 - * Verify the corrosion resistance of each component of the pump, and do NOT expose the pump to any fluid for which it does not have proper corrosion resistance.
 - * Exhaust should be directed outside, not into the fluid in which the pump is submerged.
For information on how to arrange the exhaust, see NOTE: Arranging outside exhaust and Fig. 3.2 below.
 - * Make sure that you can reach all of the valves without submerging your hand.
- When operating the pump, operation noise may be generated, depending upon conditions of use (kind of fluid being pumped, supply air pressure and discharge pressure). If any regulatory rules apply, provide appropriate acoustic measures. (For the noise level of this product, see "10.1 Main specifications".)
- When pumping a hazardous fluid (hot, flammable, strong acid, etc.), provide protective measures (installation of a pit or sensors, etc.) in consideration of possible leakage of fluid, and post warning signs at necessary places. For details, see the applicable operating caution on P.2/3 and P.3/3.

<NOTE>

Arranging outside exhaust

- Remove the silencer.
- Connect a hose with a ground wire to the pump's exhaust port, and attach the silencer to the tip of the hose. Use a hose of the same diameter as the exhaust port. (If the hose is longer than 5 meters, consult your dealer or our regional office.)
- Have a pit, a protection box, etc. at the end of the hose.

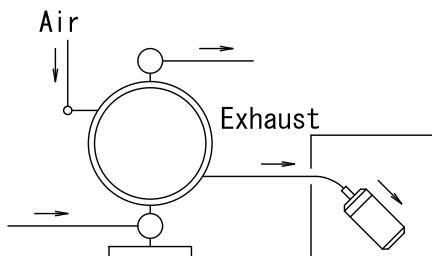


Fig.3.2



WARNING



- Be sure to have a pit, a protection box, etc. at the end of the hose in preparation for the flow of fluid in case of damage to a diaphragm. For details, see the applicable operating caution on P.2/3.
- Pump exhaust should be directed to a safe place, away from people, animals and food.

<NOTE>

When air line operation is to be controlled by a solenoid valve, a three way type is recommended. A three-way solenoid valve allows any trapped air to bleed off, in turn improving pump performance

4. Connection

4.1 Connecting fluid piping (Fig. 4.1)

- 1) Connect a flow valve and a drain valve to the fluid discharge port of the pump.
- 2) Connect a valve for maintenance to the fluid suction intake port of the pump.
- 3) Connect a hose to the valve on the suction-port side and the valve of the discharge-port side of the pump.
- 4) Connect a hose on the suction-side intake and the discharge-side to the respective vessels.

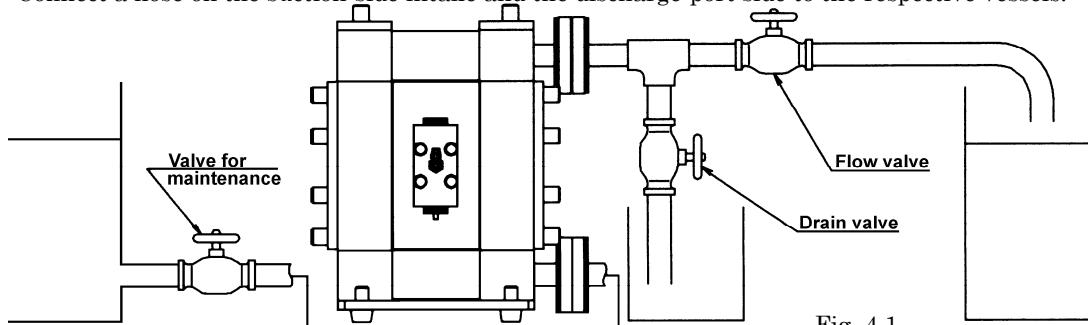


Fig. 4.1

CAUTION



- When testing piping for leakage, do NOT apply pressure to the pump's inlet and outlet sides with compressed air from outside. It may cause abnormal breakage to the diaphragm or the switching portion. When testing the piping, either install a valve between the pump's suction inlet and the discharge outlet and piping, or disconnect the pump from the piping and install plugs so that there will be no pressure from outside.



- Use a flexible hose to absorb pump vibration, and ground the hose.



- Make sure that there will be no external force on any connection part of the pump. Be especially careful not to have the pump support part of the weight of the hose and the piping.



- Use a sturdy hose that will not collapse under the strong suction of the pump. Also, make sure the hose is of more than sufficient pressure rating.



- Use a hose of a diameter the same as or larger than the pump's ports. If you use a hose of smaller diameter, the pump's performance will be adversely affected, and it may even malfunction.



- When pumping a fluid that contains slurry, verify that the particle size is below the slurry limitation (see "10.1 Main specifications"). If it exceeds the limitation of slurries indicated in the main specifications, attach a strainer to the pump to stop larger particles. Otherwise, such particles may cause a malfunction.



- If, depending upon the place of pump installation, the volume of the pumped fluid changes drastically, install a relief valve on the discharge side, and bring the pressure down below the maximum permissible value. (Refer to Fig. 4.2)

If, owing to a change in the volume of fluid, the pressure inside the pump exceeds the maximum permissible pressure, it may cause damage.



- Keep a vessel below the relief valve to catch any drain off.

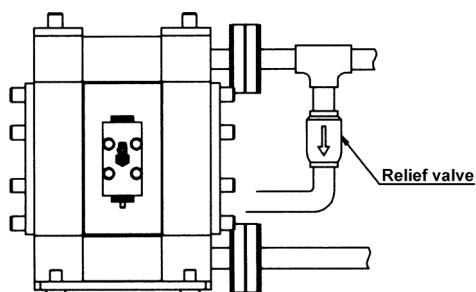


Fig. 4.2



- In our product inspection, clean water is used. To prevent mixture of dirty water into the fluid to be pumped, clean the inside of the pump before finishing installation work.



- When installing a standby pump or two pumps in parallel from, be sure to provide a valve on each of the IN and OUT sides and perform pump switching by using the liquid material valve. If the valve of the stop-side pump is open, the diaphragm will be inverted by the discharge pressure of the operating-side pump, resulting in damage in an early stage.

4.2 Connecting air piping

WARNING



- Before starting work, make sure that the air compressor is shut off.

- 1) Connect an air valve, air filter, regulator and if necessary lubricator (hereinafter called the "peripheral equipment") to hose which connected to compressor.
Install air valve on the air inlet of the pump. See <NOTE> for the details.
- 2) Install these peripheral items supported by brackets, etc., near the pump.
- 3) Connect the hose from the peripheral equipment to the air valve of the pump's supply port.


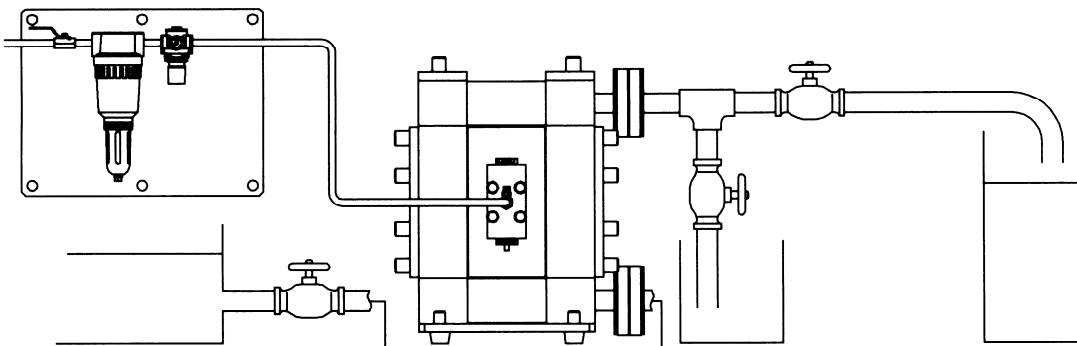


Fig. 4.3

CAUTION



- Use a flexible hose to absorb pump vibration, and ground the hose.
- Make sure that there will be no external force on any connection part of the pump. Be especially careful not to have the pump support part of the weight of the hose and the piping.
- The piping and the peripheral equipment may become clogged with sludge. Clean the inside of the piping for 10 to 20 seconds before connecting it to the pump.
- Be sure to sufficiently ground the piping and peripheral equipment.

<NOTE>

- Air piping size should be equal to the inlet port of the pump to supply enough air to run the pump. The air compressor should be able to provide adequate air flow to the pump. Attach the compressor as close as possible to the pump, considering operability and stability of air pressure.
- If you use a solenoid valve as the air valve, be sure it is a three-way valve. When the valve is closed, the internal compressed air of the pump will be released, and this will switch the spool to its normal position.
- Use of a coupler for the connection part of each hose will make operation and maintenance easier.

5. Operation

5.1 Operating method



CAUTION



- Before starting the pump, make sure that all piping is properly connected.
- Also, before starting the pump, make sure that all the bolts are securely tightened.
(Refer to the maintenance manual for the bolts that a regulation torque are explained.)
- Make sure that the air valve, regulator and the drain valve on the discharge side are closed.
Also, make sure that the valve on the suction side is opened.

- 1) Start the air compressor.
- 2) Open the air valve in front of each piece of peripheral equipment, and adjust the supply air pressure with a regulator to within the permissible range (see “10.1 Main specifications”).
- 3) Open the flow valve on the discharge side.
- 4) Press the RESET button, and then slowly open the air valve of the pump.
- 5) First, verify that fluid is flowing inside the piping and is being pumped to the discharge side, and then fully open the air valve.



CAUTION



- Do NOT open the air valve suddenly.

5.2 Flow adjustment

Adjust the flow valve on the discharge side. For the relationship among the flow, supply air pressure and discharge pressure, see “10.3 Performance curve”.



CAUTION



- As you start closing the flow valve, the supply air pressure may rise. Make sure that the pressure is kept within the normal operating range (see “10.1 Main specifications”).
- Depending upon the viscosity and specific gravity of the fluid, the suction stroke and other conditions, the permissible suction flow speed of fluid into the pump will vary; however, if the pump speed (flow speed of fluid) increases greatly, cavitation will occur, and this not only will reduce pump performance, but it may cause a malfunction. Adjust the supply air pressure as well as the flow in order to prevent cavitation.
- If fluid is not discharged after you start the pump, or if you hear an abnormal noise or notice any irregularity, shut down the pump immediately (see “8. Troubleshooting”).

5.3 Shutdown

Close the air valve of the pump and shut off the supply air.

CAUTION



- There is no problem in shutting down the pump with the flow valve closed while air is being supplied; however, if this condition continues for many hours while there is nobody watching the pump, it may continue running when there is a leak from the pump or piping, and fluid may continue flowing out of the position of leakage. Upon finishing your work, release the internal pressure from the pump and close the air valve (see “5.4 Releasing the pressure”).
- When the pump is shut down while pumping slurry, particulate matter contained in the slurry will be deposited and get stuck inside the out chamber. If the pump is started again as-is, the diaphragm may be damaged or the center disk may be overloaded, and this may cause damage such as bending of the center rod. After finishing your work, purge the remaining fluid from the pump (see “6. Method of Cleaning”).
- If the pump will be unused for a prolonged period, purge and clean the pump (see the Operating caution on P.2/3).
- If the pump is left unused for a long period with chemicals inside, gas may permeate through diaphragms or other parts and cause metal parts to corrode. When shutting down the pump for more than one day, let it run for about 10 minutes a day to displace the trapped air.

5.4 Releasing the pressure

- 1) Make sure that the air valve of the pump is closed.
- 2) Shut down the air compressor or close the valve on the air-supply side of the peripheral equipment.
- 3) Close the flow valve on the discharge side, start slowly opening the drain valve, and discharge the fluid under pressure.
- 4) Open the air valve of the pump, start running the pump, and discharge the remaining air.
- 5) After making sure that the pump has been shut down and the pressure has been released, fully open the regulator, and close the air valve and drain valve of the pump.


CAUTION



- Keep a vessel below the relief valve to catch any drain off.
- Fluid under pressure will gush out as soon as you open the valve, so be careful.

6. Method of Cleaning

WARNING



- Before starting operation, make sure that compressed air is not supplied to the pump.
- Before starting operation, make sure that the pump is not pressurized.

- 1) Remove the hose from the suction side of the pump.
- 2) Close the flow valve on the discharge side, open the drain valve, and then operate a pump by starting air pressure for a while to discharge any fluid remaining inside the pump as much as possible.
- 3) Remove the hose from the discharge side, and attach different hoses to the suction side and the discharge side for cleaning.
- 4) Be ready with a vessel with cleaning solution, select cleaning solution appropriate for the type of fluid pumped, and then connect the suction-side and the discharge-side hoses of the pump.
- 5) Operate a pump by starting air pressure slowly, and let the cleaning solution circulate for sufficient cleaning.
- 6) Finally, flush with clean water.
- 7) Remove the hose from the suction side of the pump, run the pump for a while and purge the pump of remaining fluid as much as possible.

CAUTION



- Be careful when removing piping. Fluid will gush out.
- After cleaning with clean water, turn the pump upside down to drain out the water.

7. Daily Check

Before starting pump operation, be sure to conduct the following check every day. If any irregularity is found, do NOT start running the pump until the cause of the irregularity has been found and corrective measures have been taken.

- a) Verify the drain flow through the air filter.
- b) Make sure that there is no leakage of fluid from any connection part or the pump.
- c) Make sure that there are no cracks in the pump casing or piping.
- d) Check the tightness of every bolt of the pump and retighten if necessary. For details, see the maintenance manual.
- e) Make sure that the connection parts of the piping and peripheral equipment are not loose.
- f) Make sure that each consumable parts of the pump has not been inspected or replaced. For details, see the maintenance manual.

8. Troubleshooting

Symptom	Contents of inspection	Corrective measure
The pump fails to start.	<ul style="list-style-type: none"> - The exhaust port (silencer) of pump is clogged with sludge. - Air is not supplied. - The supply air pressure is low. - Air leaks from connection parts. - Air piping or peripheral equipment is clogged with sludge. - The flow valve on the discharge side is not open. - The spool stopped in neutral position. - The fluid piping is clogged with sludge. - The pump is clogged with sludge. 	<ul style="list-style-type: none"> - Check and clean the exhaust port and silencer. - Start the compressor, and open the air valve and air regulator. - Check the compressor and the configuration of air piping. - Check the connection parts and tightness of bolts. - Check and clean the air piping. - Open the flow valve on the discharge side. - Press the RESET button. - Check and clean the fluid piping. - Disassemble the casing, check and clean.
Pump runs, but fluid does not come out	<ul style="list-style-type: none"> - The suction lift or discharge head is long. - The discharge-side fluid piping (including the strainer) is clogged with sludge. - The valve on the suction side is not open. - The pump is clogged with sludge. - The ball and valve seat are worn out or damaged. 	<ul style="list-style-type: none"> - Confirm the piping configuration and shorten the length. - Check and clean the fluid piping. - Open the valve on the suction side. - Disassemble the casing, check and clean. - Disassemble the manifold, check and replace parts.
Flow (discharge volume) decreased	<ul style="list-style-type: none"> - The supply air pressure is low. - Air piping or peripheral equipment is clogged with sludge. - The discharge-side flow valve opens differently. - Air is taken in together with fluid. - Cavitation occurs. - Chattering occurs. - Icing on air-switching portion. - The fluid piping (including the strainer) is clogged with sludge. - The exhaust port (silencer) of the pump is clogged with sludge. - The pump is clogged with sludge. 	<ul style="list-style-type: none"> - Check the compressor and configuration of air piping. - Check and clean the air piping. - Adjust the discharge-side flow valve. - Replenish fluid and check the configuration of the suction-side piping. - Adjust the supply air pressure and discharge pressure, and shorten the suction lift. - Adjust the supply air pressure and discharge pressure. Reduce inlet flow valve to adjusting liquid pressure and volume. - Eliminate ice from air-switching valve and check and clean the air filter. Use external exhaust hose to control exhaust air speed. (Refer Fig.3.2) - Check and clean the fluid piping and strainer. - Check and clean the exhaust port and silencer. - Disassemble the casing, check and clean.



Symptom	Contents of inspection	Corrective measure
Liquid leakage from exhaust port (silencer)	- The diaphragm is damaged.	- Disassemble and check the pump and replace the diaphragm.
	- The fastening nuts for the center disk are loose.	- Disassemble and check the pump. Tighten the nuts.
High air consumption during operation	- The seal ring and sleeve are worn out.	- Disassemble the air-switch portion, check and clean. Replace parts as necessary.
Irregular noise	- The supply air pressure too high.	- Adjust the supply air pressure.
	- The spool oscillates, and occur ball chattering.	- Adjust the supply air pressure and discharge pressure. Reduce inlet flow valve to adjusting liquid pressure and volume.
	- The pump is clogged with sludge with particles of larger than the permissible diameter.	- Disassemble the casing, check and clean.
Irregular vibration	- The supply air pressure is too high.	- Adjust the supply air pressure.
	- The spool oscillates, and occur ball chattering.	- Adjust the supply air pressure and exhaust pressure.
	- Connection parts and pump mounting are loose.	- Check each connection part and tighten the bolts.

- If disassembly is required, refer to the maintenance manual and follow with the instructions.
- If any of the above mentioned causes does not apply to your problem, contact your dealer or our regional office.

9. Returning the Product for Servicing

9.1 Before returning the product

- 1) Purge the pump of fluid and clean (see "6. Method of Cleaning").
- 2) Return the product in the same package as when it was first shipped from the factory.

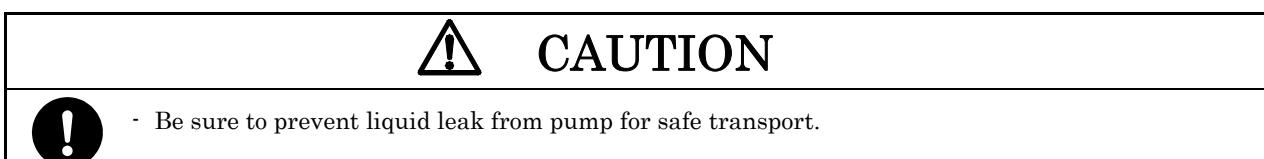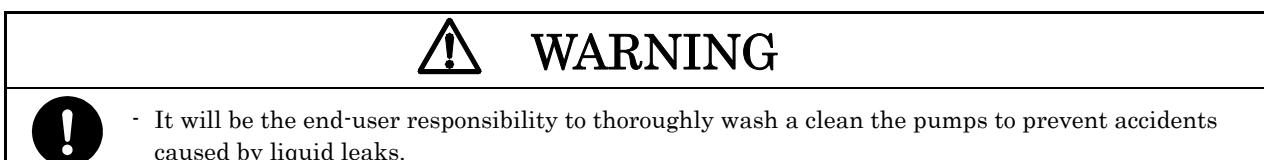

10. Main Body Specifications

10.1 Main specifications

■ DP-F Series

Type	DP-5F	DP-10F	DP-20F	DP-25F	DP-38F		
Nominal Diameter	1/4" (6 mm)	3/8" (10 mm)	3/4" (20 mm)	1" (25 mm)			
Fluid Connection	Suction Port	Rc 1/4 NPT 1/4	Rc 3/8 or Equivalent to JIS flange 10K10A NPT 3/8 or Equivalent to ANSI flange 150 1/2"	Rc 3/4 or Equivalent to JIS flange 10K20A NPT 3/4 or Equivalent to ANSI flange 150 3/4"	Equivalent to JIS flange 10K25A Equivalent to ANSI flange 150 1"		
	Discharge Port						
Air Connection	Supply Port	Rc 1/4 NPT 1/4			Rc 3/8 NPT 3/8		
	Exhaust Port	Rc 3/8 NPT 3/8			Rc 3/4 NPT 3/4		
Operating Air Pressure	0.2 - 0.5 MPa			0.2 - 0.7 MPa			
Maximum Discharge Pressure	0.5 MPa			0.7 MPa			
Discharge Volume/cycle*1	13 mL	65 mL	150 mL	300 mL	700 mL		
Maximum Discharge Volume	11 L/min	27 L/min	54 L/min	64 L/min	95 L/min		
Maximum Air consumption	170 L/min(ANR)	250 L/min(ANR)	350 L/min(ANR)	900 L/min(ANR)	1500 L/min(ANR)		
Slurry Limitation*2 (Maximum passing Particle size)	_____	1 mm or less	2 mm or less	3 mm or less			
Limitation of Viscosity	0.5 Pa·s or below	1 Pa·s or below	2 Pa·s or below	2.5 Pa·s or below			
Operating Temperature Range	Temperature Ambient	0 - 70 °C					
	Temperature Liquid	0 - 80 °C					
Maximum Operating Noise	71 dB *3	82 dB *3	85 dB *3	88 dB *3	90 dB *3		
Weight	3.4 kg	7.2 kg	15.5 kg	32 kg	52 kg		

*1. The follow values depend on the operating conditions. If you have any unclear point about them, ask your dealer or our business office for further information.

*2. Do not use the flat valve type pump for the liquids with slurry.

*3. See 30 pages of "Method of measurement of operating noise".

■ DP-F/P Series

Type	DP-20F/P	DP-25F/P	DP-38F/P
Nominal Diameter	3/4" (20 mm)	1" (25 mm)	
Fluid Connection	Suction Port	Equivalent to JIS flange 10K20A	Equivalent to JIS flange 10K25A
	Discharge Port		
Air Connection	Supply Port	Rc 1/4	Rc 3/8
	Exhaust Port	Rc 3/8	Rc 3/4
Operating Air Pressure*1		0.2 - 0.5 MPa	
Maximum Discharge Pressure		0.5 MPa	
Allowable maximum intake pressure		0.06 MPa	
Discharge Volume/cycle*2	160 mL	300 mL	700 mL
Maximum Discharge Volume	30 L/min	60 L/min	70 L/min
Maximum Air consumption	400 L/min(ANR)	600 L/min(ANR)	1000 L/min(ANR)
Slurry Limitation*3 (Maximum passing particle size)	2 mm or less	3 mm or less	
Limitation of Viscosity	2 Pa·s or below	2.5 Pa·s or below	
Operating Temperature Range	Temperature Ambient	0 - 70 °C	
	Temperature Liquid	0 - 80 °C	
Maximum Operating Noise	85 dB *4	88 dB *4	90 dB *4
Weight	14.8 kg	32 kg	52 kg

- *1. Compressed air quality shall be satisfied quality grade 2 (Maximum particle size: 1 µm), grade 3 (Maximum pressure dewpoint: -20°C), grade 2 (Maximum oil density: 0.1 mg/m³) of "Compressed air for the general use (ISO 8573-1: 1991)".
- *2. The follow values depend on the operating conditions. If you have any unclear point about them, ask your dealer or our business office for further information.
- *3. Do not use the flat valve type pump for the liquids with slurry.
- *4. See 30 pages of "Method of measurement of operating noise".

■ DP-Fi Series

Type	DP-10Fi/P/R	DP-20Fi/P/R
Nominal Diameter	3/8" (10 mm)	3/4" (20 mm)
Fluid Connection	Suction Port	Rc 3/8
	Discharge Port	
Air Connection	Supply Port	Rc 1/4
	Exhaust Port	Rc 3/8
Operating Air pressure	0.2 - 0.5 MPa *1	
Maximum Discharge Pressure	0.5 MPa	
Discharge Volume/cycle*2	70 mL	185 mL
Maximum Discharge Volume	24 L/min	42 L/min
Maximum Air consumption	330 L/min(ANR)	370 L/min(ANR)
Slurry Limitation*3 (Maximum passing particle size)		
Limitation of Viscosity	1 Pa·s or below	
Operating Temperature Range	Temperature Ambient	0 - 70 °C
	Temperature Liquid	0 - 80 °C
Maximum Operating Noise	85 dB *4	88 dB *4
Weight	10.1 kg	17.8 kg

- *1. Compressed air quality shall be satisfied quality grade 2 (Maximum particle size: 1 µm), grade 3 (Maximum pressure dewpoint: -20°C), grade 2 (Maximum oil density: 0.1 mg/m³) of "Compressed air for the general use (ISO 8573-1: 1991)".
- *2. The follow values depend on the operating conditions. If you have any unclear point about them, ask your dealer or our business office for further information.
- *3. Do not use the flat valve type pump for the liquids with slurry.
- *4. See 30 pages of "Method of measurement of operating noise".

■ DP-Fs Series

Type	DP-10Fs/P/H	DP-20Fs/P/H
Nominal Diameter	3/8" (10 mm)	3/4" (20 mm)
Fluid Connection	Suction Port	Rc 3/8 or Equivalent to JIS flange 10K10A
	Discharge Port	Rc 3/4 or Equivalent to JIS flange 10K20A
Air Connection	Supply Port	Rc 1/4
	Exhaust Port	Rc 3/8
Operating Air Pressure		0.2 - 0.5 MPa *1
Maximum Discharge Pressure		0.5 MPa
Allowable maximum intake pressure		0.06 MPa
Discharge Volume/cycle*2	85 mL	160 mL
Maximum Discharge Volume	20 L/min	40 L/min
Maximum Air consumption	300 L/min(ANR)	400 L/min(ANR)
Slurry limitation (Maximum passing particle size)	1 mm or less	2 mm or less
Limitation of Viscosity	1 Pa·s or below	2 Pa·s or below
Operating Temperature Range	Temperature Ambient	0 - 70 °C
	Temperature Liquid	0 - 80 °C
Maximum Operating Noise	82 dB *3	85 dB *3
Weight	11.7 kg	19.0 kg

- *1. Compressed air quality shall be satisfied quality grade 2 (Maximum particle size: 1 µm), grade 3 (Maximum pressure dewpoint: -20°C), grade 2 (Maximum oil density: 0.1 mg/m³) of "Compressed air for the general use (ISO 8573-1: 1991)".
- *2. The follow values depend on the operating conditions. If you have any unclear point about them, ask your dealer or our business office for further information.
- *3. See 30 pages of "Method of measurement of operating noise".

10.2 Appearance and dimensions




CAUTION




- Due to improvement or modification of products, dimensions may change without notice. Please contact your distributor or regional office for detailed information.

10.2.1 DP-F series


■ DP-5F

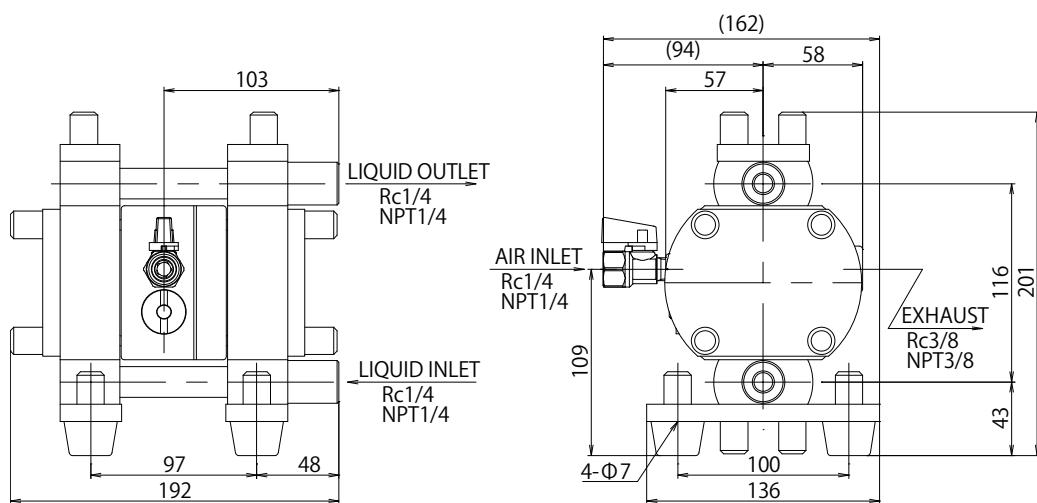


■ DP-10F (PT: FEMALE)

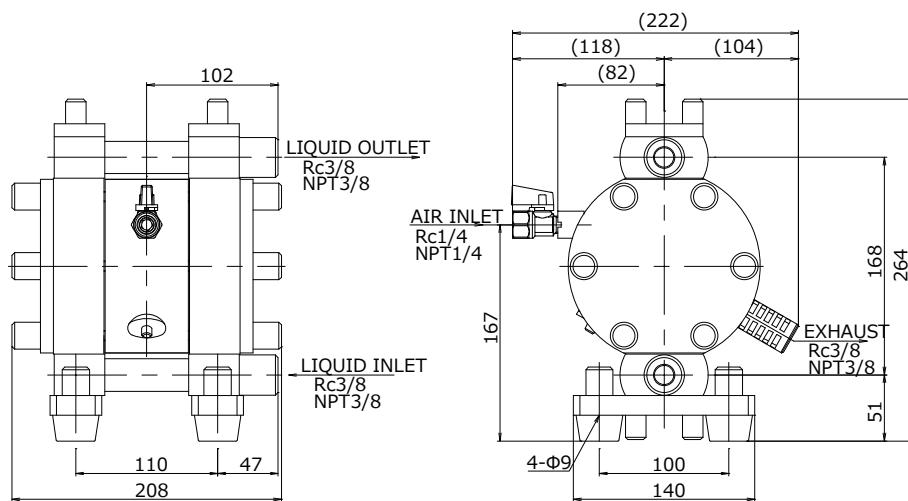


■ DP-10F (JIS 10K 10A)

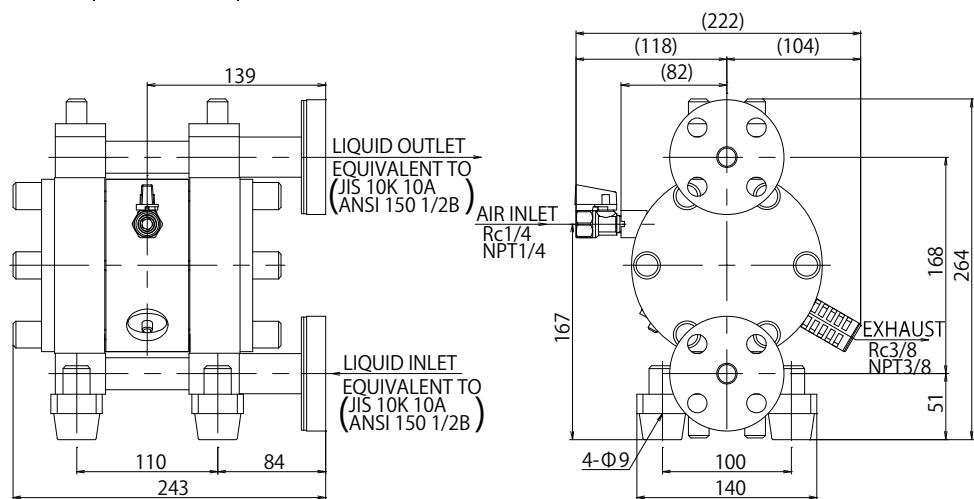


■ DP-20F (PT: FEMALE)

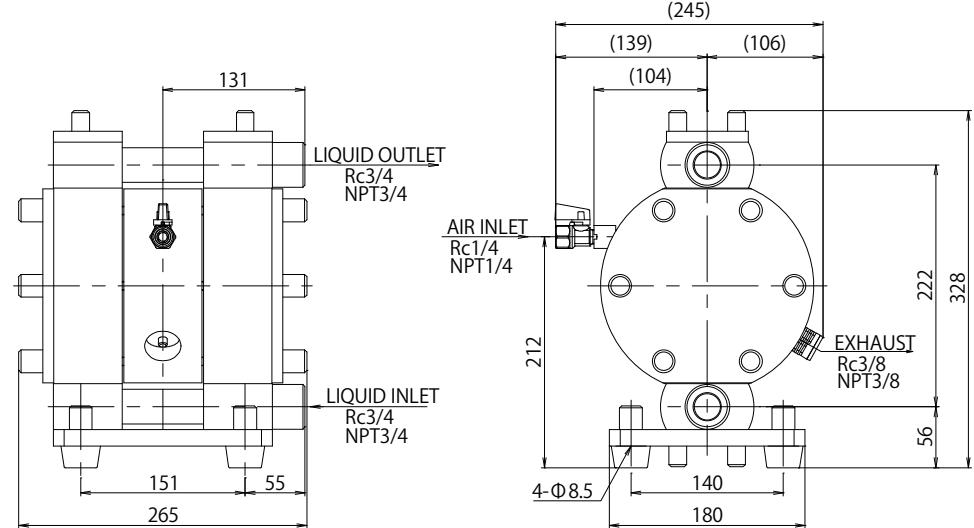


■ DP-20F (JIS 10K 20A)

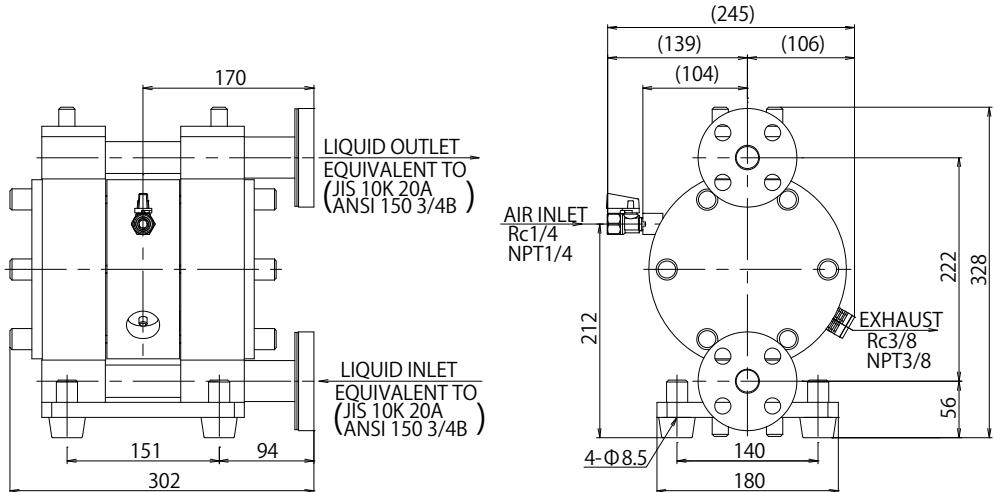

■ DP-25F

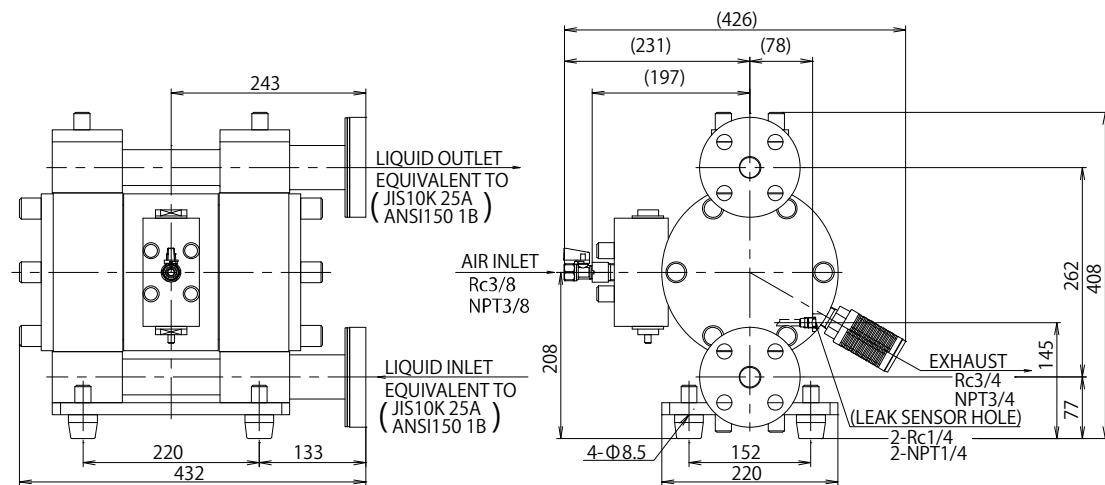


■ DP-38F

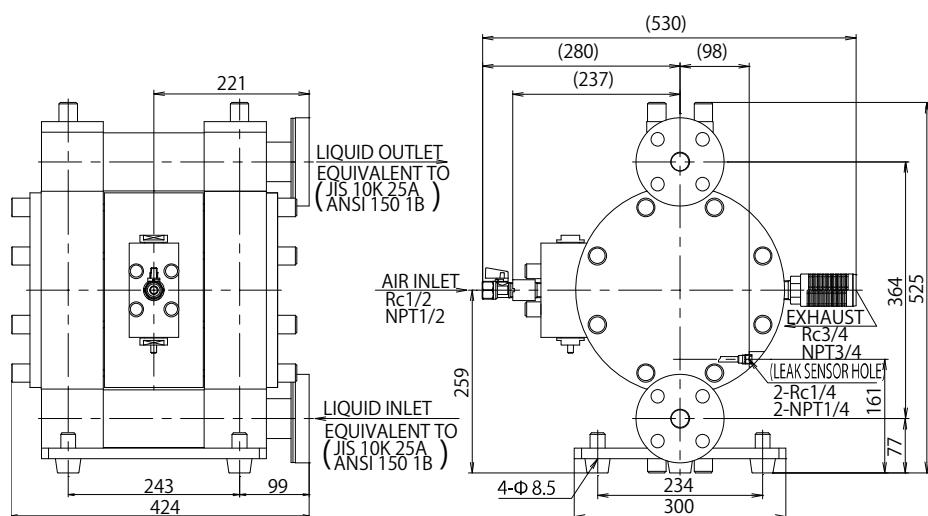


10.2.2 DP-F/P series


■DP-20F/P

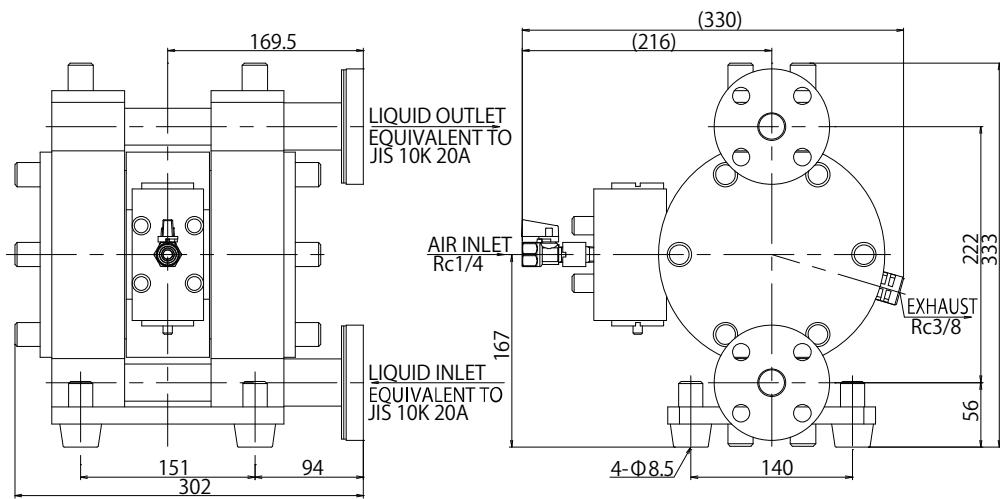

■ DP-25F/P

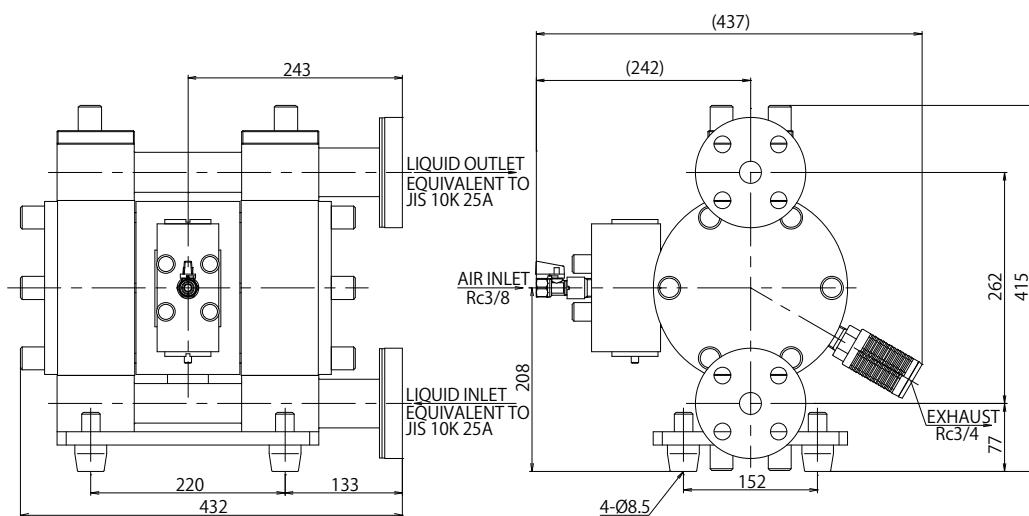


■ DP-38F/P

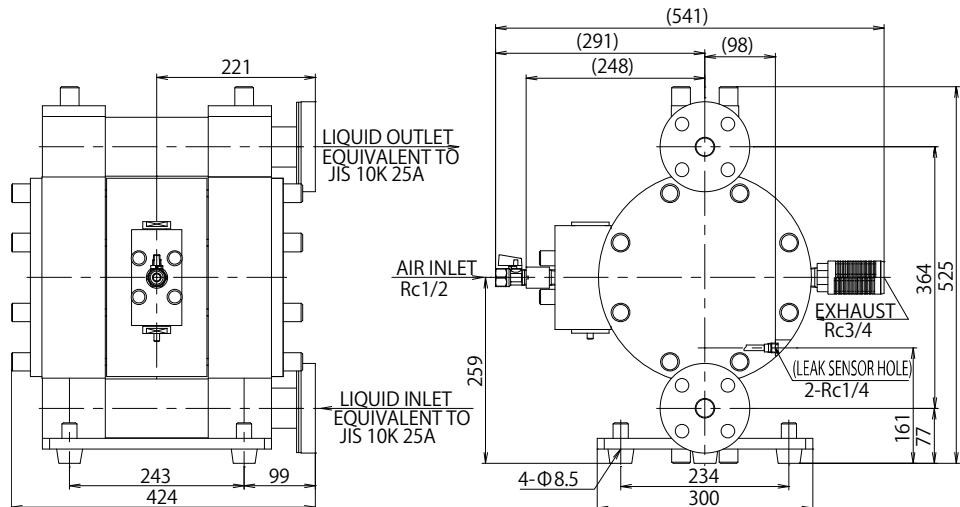


10.2.3 DP-Fi series

■ DP-10Fi/P/R

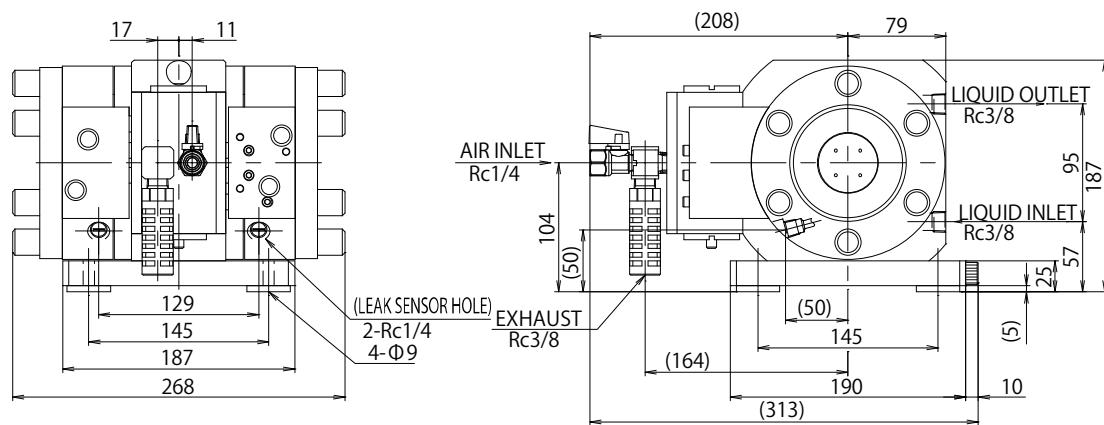


■ DP-20Fi/P/R

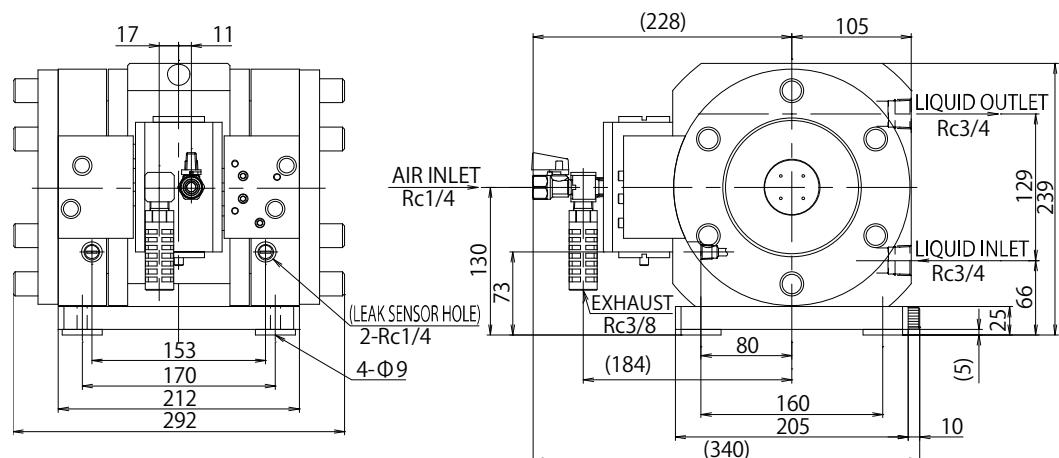


10.2.4 DP-Fs series


■ DP-10Fs/P/H (THREAD TYPE)

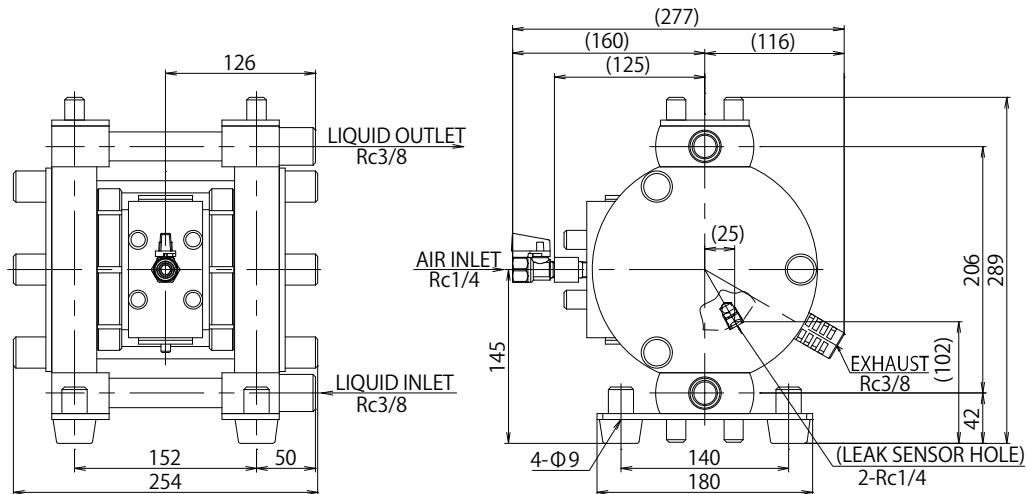


■ DP-10Fs/P/H (FLANGE TYPE)

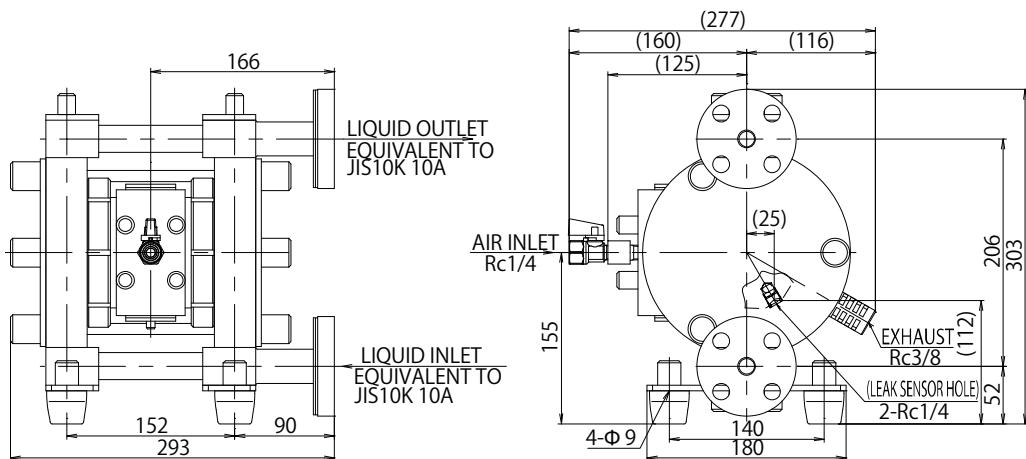

■ DP-20Fs/P/H (THREAD TYPE)

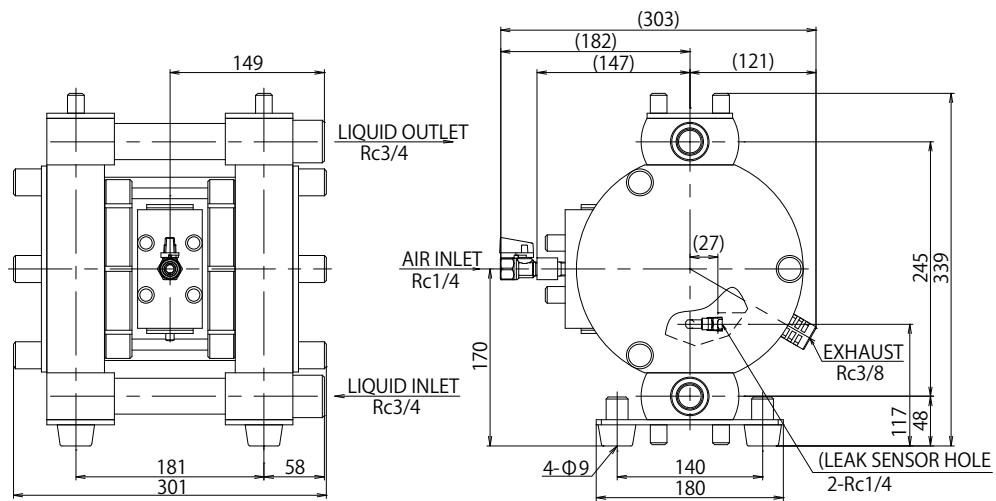


■ DP-20Fs/P/H (FLANGE TYPE)

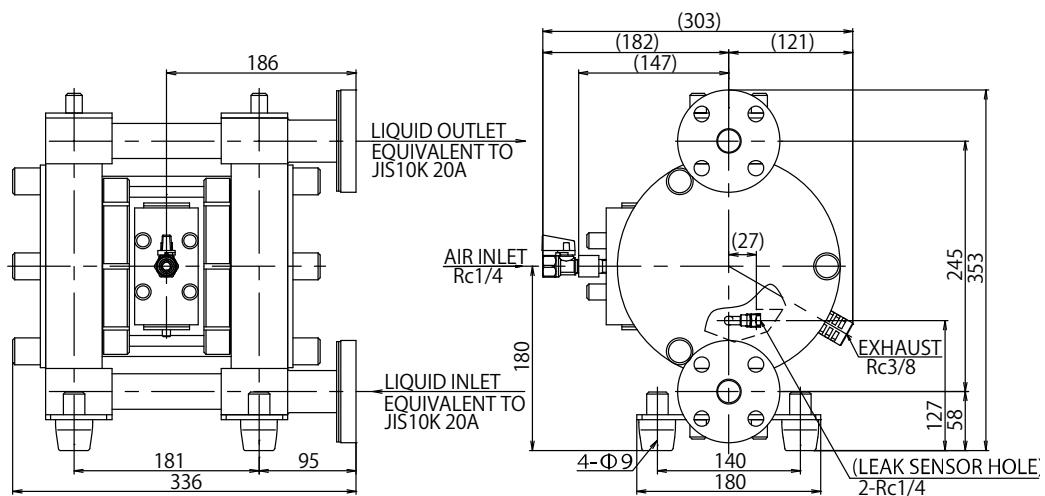


10.3 Performance Curve

10.3.1 DP-F series


■ DP-5F

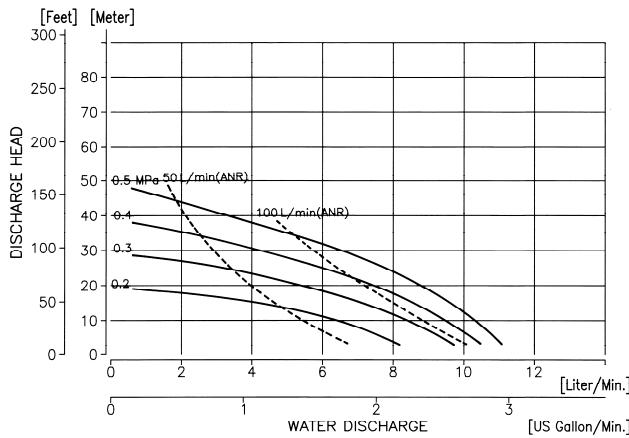


■ DP-10F

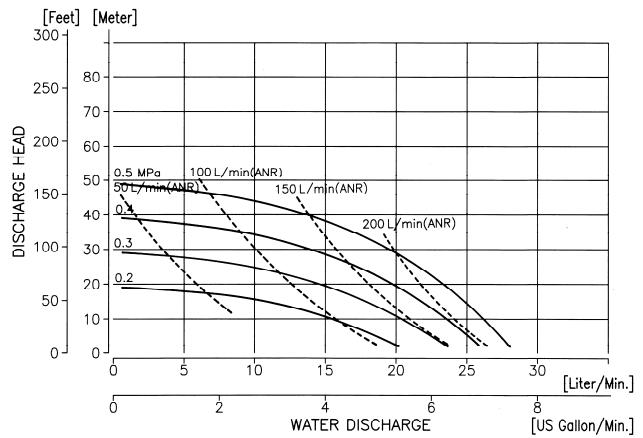


■ DP-20F

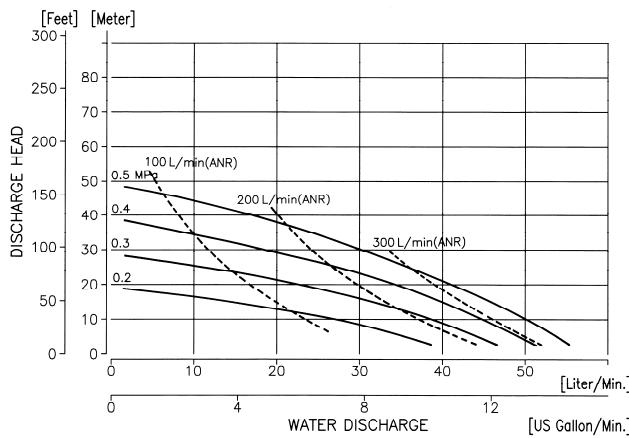

■ DP-25F

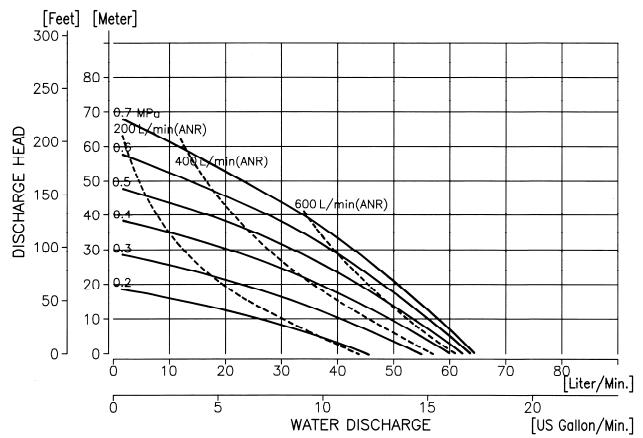


■ DP-38F

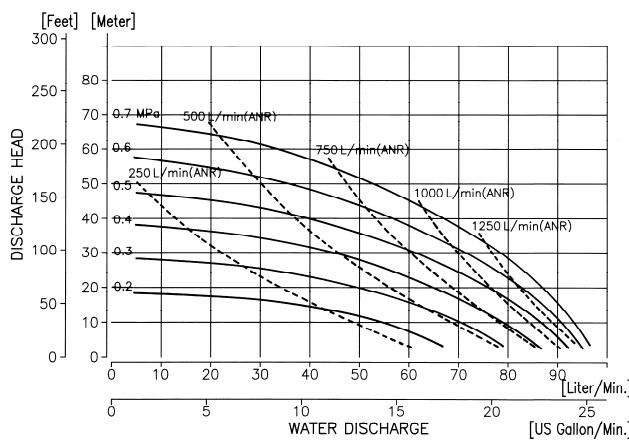


10.3.2 DP-F/P series


■ DP-20F/P

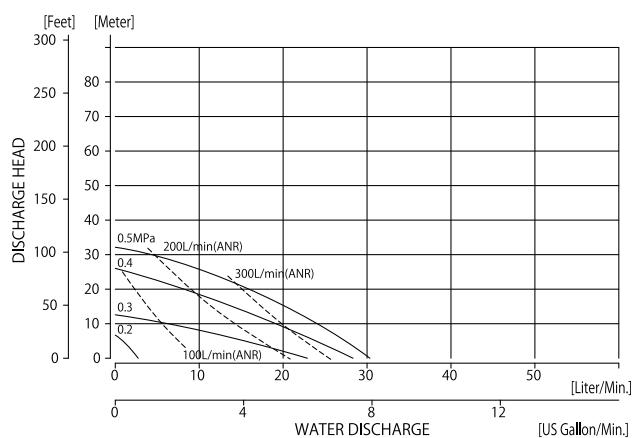

■ DP-25F/P

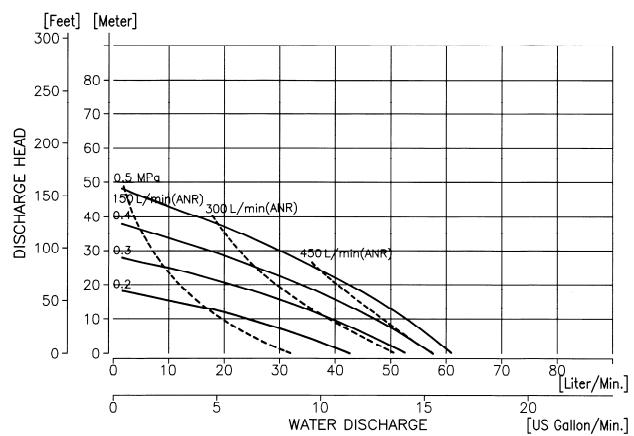


■ DP-38F/P

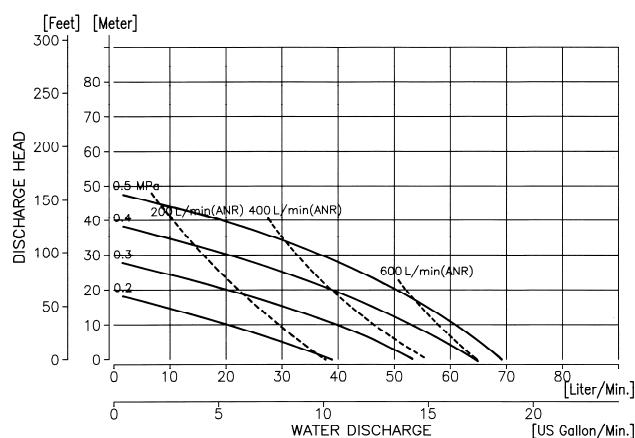


10.3.3 DP-Fi series

■ DP-10Fi/P/R

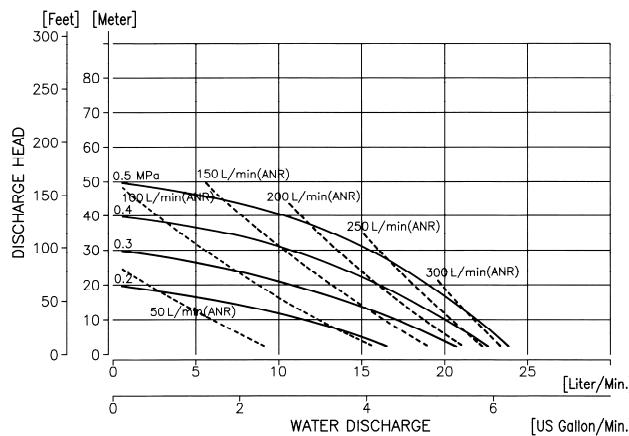


■ DP-20Fi/P/R

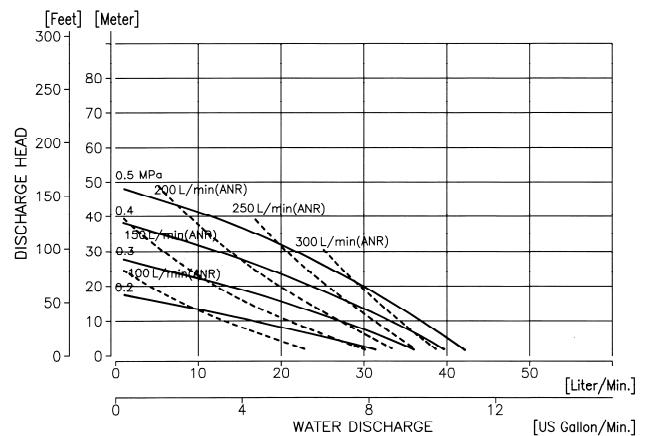


10.3.4 DP-Fs series

■ DP-10Fs/P/H

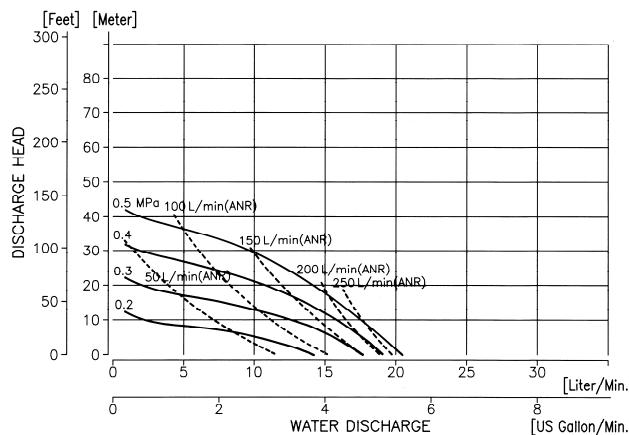


■ DP-20Fs/P/H

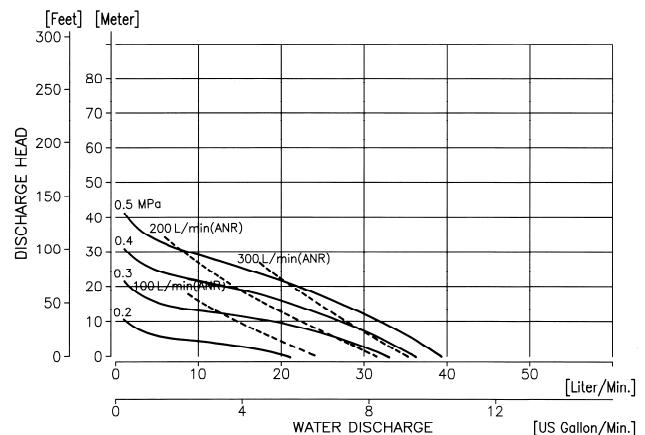

■ Method of measurement of operating noise

With a specified noise meter, the operating noise is measured at measurement points A, B and C, and the maximum value is to be used.

The display noise level is the maximum value at flow rate measurement condition. The noise level depends on the condition.

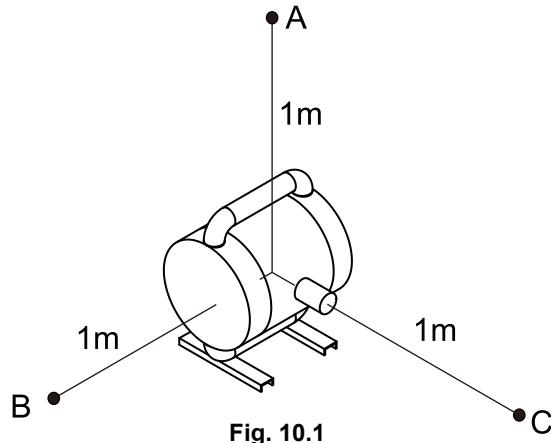

■ Method of measurement of performance curve

Measuring instruments and procedure

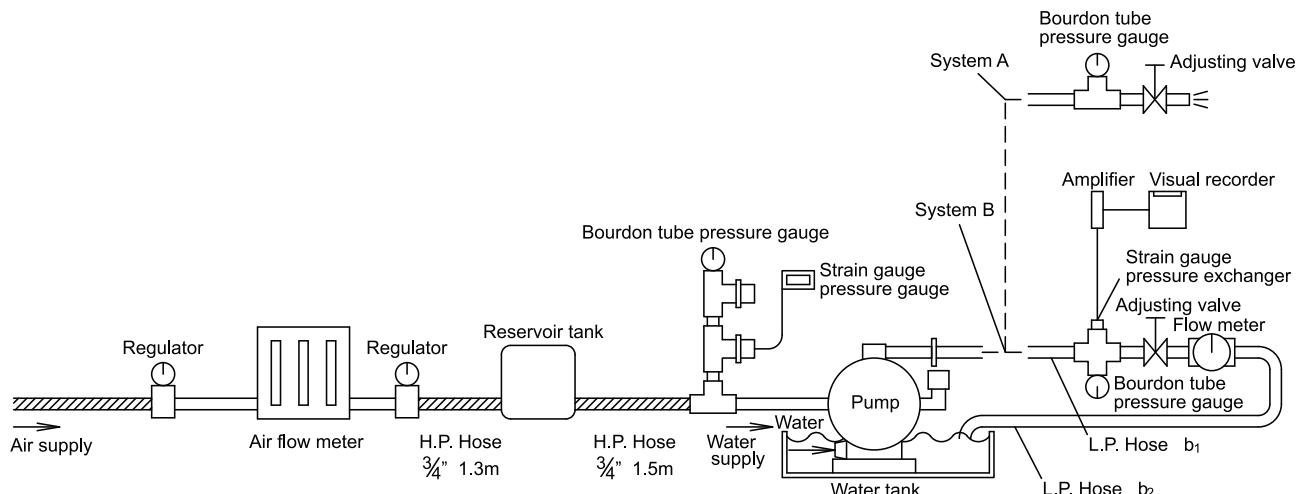


Fig. 10.2

- Conditions

- Supplied air pressure: Maintaining preset pressure
- Liquid pumped: Fresh water
- Temperature: Ambient
- Condition of suction: Flat suction 0 meter head
- Measuring system: System A Converting weight of discharged fluid to volume.
System B By liquid meter

11. Limited Warranty

If an abnormality occurs during normal operation in accordance with the operating instructions and other operating cautions within the warranty period (12 months after date of purchase) that can be attributed to a manufacturing defect, the defective parts of this product will be serviced or the product will be replaced free of charge. However, this warranty will not cover compensation for incidental damage or any malfunction listed below.

1. Warranty period

This warranty will be valid for a period of 12 months after the date of purchase.

2. Warranty

If, during the warranty period, any of the material or the genuine parts of this product or the workmanship of this product is found defective, and is so verified by our company, the servicing cost will be fully born by our company.

3. Exclusion

Even during the warranty period, this warranty does not cover the following.

- (1) Malfunction arising from use of parts other than manufacturer-specified genuine parts
- (2) Malfunction arising from misuse or operating errors, or lack of storage or maintenance care
- (3) Malfunction arising from use with a fluid that may cause corrosion, inflation or dissolution of the component parts of the product
- (4) Irregularity arising from repair made by other than by our firm, our regional office, dealer or authorized service personnel
- (5) Malfunction arising from modification of the product by other than authorized service personnel
- (6) Wear and tear of parts that must be regularly replaced in the course of normal operation, such as diaphragms, center disk, valve seats, balls/flat valve, air switch sleeve valves, pilot valve, O-rings and gasket.
- (7) Malfunction and/or damage due to use with incorrect voltage.
- (8) Malfunction and/or damage due to transportation, moving or drop page of the product after purchase
- (9) Malfunction and/or damage due to fire, earthquake, flood or other force majeure
- (10) Malfunction arising from use of compressed air that contains impurities or excessive moisture or use of gases or fluids other than the specified compressed air
- (11) Malfunction arising from use of excessively abrasive material or of inadequate grease.

Furthermore, this warranty does not cover the rubber parts, or other parts used in this product and its accessories, which are subject to wear in normal operation.

- hoses • packings • cords

4. Parts


Parts for this product will be kept available for 5 years after discontinuation of production. Once 5 years have elapsed after close of production, availability of parts for this product cannot be guaranteed.

12. Warning Symbols

BEWARE: HIGH TEMPERATURE



ELECTRIC SHOCK

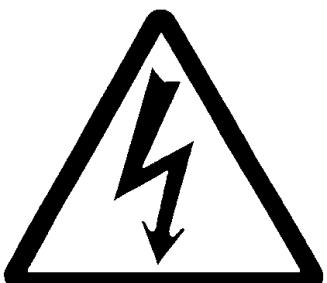

POISON



FLAMMABLE



CORROSION



EXPLOSION



General warnings, cautions and danger notifications



FIRE STRICTLY PROHIBITED



YAMADA CORPORATION

INTERNATIONAL DEPARTMENT

1-1-3, Minami-Magome, Ota ku, Tokyo, 143-8504, Japan
PHONE : +81-(0)3-3777-0241
FAX : +81-(0)3-3777-0584
E-mail : intl@yamadacorp.co.jp
Web : www.yamadacorp.co.jp

YAMADA (THAILAND) CO., LTD

41/79 Moo 6, Bangcha-long, Bangplee, Sumutprakarn 10540, Thailand
PHONE : +66-(0)2-130-0990
FAX : +66-(0)2-130-0993
E-mail : sales@yamada-th.com